AC008 Speed Alarm Light

Installation

Connect the speed alarm light to the Monit standard wiring loom according to the following wire colours:

- loom according to the following wire colours:
- Speed alarm Red wire to Monit loom Red (12v+) wire
 Speed alarm Green wire to Monit loom Black (0v-) wire
- Speed alarm Blue wire to Monit loom White wire

The speed alarm will not work until it is configured in the software. Navigate to the 'Settings'>'Auxilary A'>'Speed Alarm' and press OK.

Go 'back' to the main menu screen and scroll across to the new 'Speed Alarm' menu that has appeared. You can now set the speed that the alarm triggers at in this menu.

Troubleshooting

Please ensure that you have double checked the following items:

- The wiring colours are confusing, please ensure you have followed the correct wiring, as per above.
- Please ensure the the Speed Alarm is activated under 'Auxilary A' and that your activation speed is set as you desire.

For further information on the Speed Alarm function, please refer to the Monit G100+/200+ users manual, page 35, or contact Monit directly.

monit rally

© Monit Limited

3)

Speed Alarm Light (For use with Monit G200+ only)

AC008-EN

An active 16 high bright LED array for use with the G200+ speed alarm function.



© Monit Limited